



USER MANUAL

DAB-378AP DAB+/FM

mini Radio



IMPORTANT:

Please read the manual carefully before using the product and keep it for future reference.

Unpacking

Thank you for purchasing our product **DAB – 378AP** Radio.

The pack should contain:

- 1 pc DAB-378AP radio
- 1 pc USB cable charger
- 1 pc User manual
- 1 pc Stereo earpiece

Optional:

- 1 pc Battery charger
- 1 pc 3.5mm to 3.5mm line-in cable



Note: The original Blue-Links earphone is specially made for **DAB-378AP**. We do not guarantee it works perfectly with other brands of earphones.

Button Instruction



ON / OFF: Switch on and switch off. Play or pause DAB+ or FM radio.

DAB / FM: To choose the DAB+ mode or FM mode. Save the favourite DAB+ radio station. Adjust the FM frequency manually. Enter button.

LCD Display: Display the name or frequency of the radio station (if available). Display time.

 
Previous Button: Scan for the available DAB+ or FM radio stations. Choose the previous DAB+ or FM radio stations. Adjust FM frequency. Set the clock.

Next Button: Scan for the available DAB+ or FM radio stations. Choose the next DAB+ or FM stations. Adjust FM frequency. Set the clock.

Volume +: To increase the volume level, to increase the contrast of the LCD screen, to enter the favourite mode.

Volume - : To decrease the volume level, to decrease the contrast of the LCD screen, to lock and unlock the radio.

LCD Display

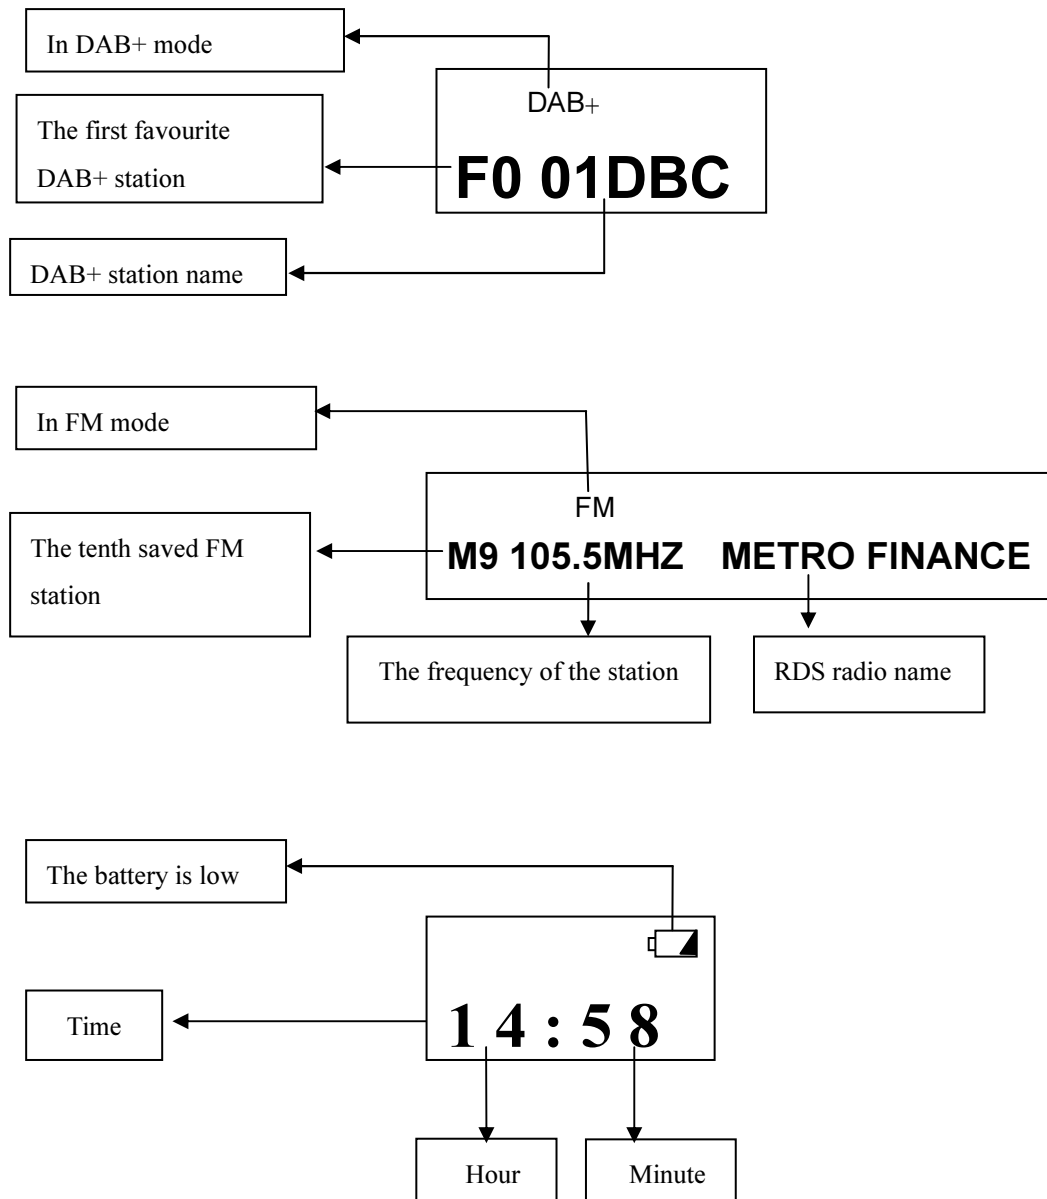

DAB+ Radio Operation

1. Switch on / off your radio

To switch your radio on: Press the ON/OFF button once and the LCD screen displays “DAB”.


To switch your radio off: Press and hold the ON/OFF button until the LCD screen displays “OFF”.

2. Scan the DAB+ radio stations

➤ **Auto scan:** For the first time, when you switch on the radio, the LCD screen will display the word “DAB”, it will **automatically scan** for the DAB+ radio stations.


➤ **Manual scan:** In DAB+ radio mode **press and hold** the ⏮ or ⏭ for **2 seconds**, the DAB+ radio station will be scanned.

During scanning, the word “SCAN” will appear on the LCD screen, and the list of available station names will be stored in the memory of your radio. When it is completed, the LCD screen will display the number of the available DAB+ radio stations (eg. “FIND: 04”). After **5 seconds**, it will play the last available radio station. If no stations are found, the words “NO DAB” will appear on the LCD screen.

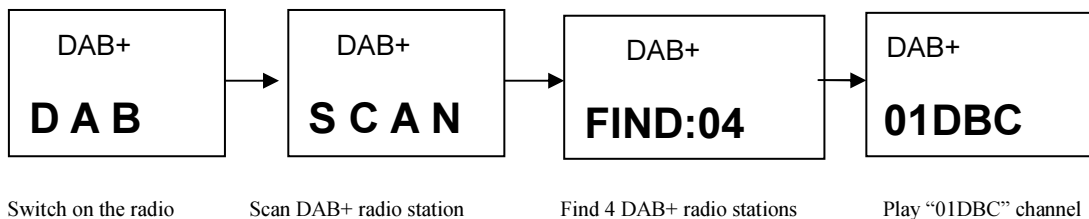


3. Listen to the DAB+ radio

When the scanning is completed, **DAB-378AP** radio will play the last available DAB+ radio station through searching. **Press** the ⏮ button to choose the previous station or **press** the ⏭ button to choose the next station. The name of the DAB+ radio station will appear on the LCD screen, (eg: “01DBC”). If the name of the radio station could not be found, “CH X X” will show on the screen. (XX is a number.)

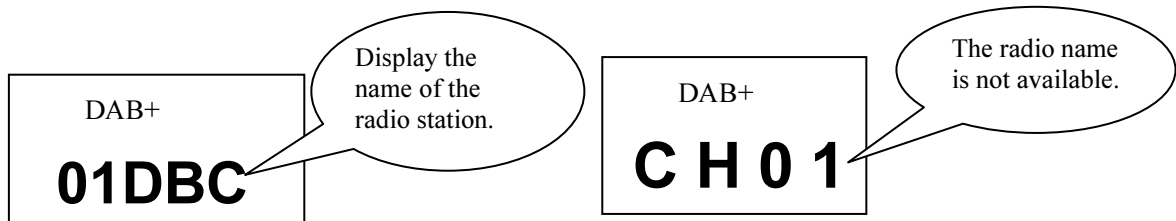


4. Save your favourite list of the DAB+ radio stations.

If you listen to certain stations regularly, you can save these as your favourite stations. There are five favourite lists that you can save. In DAB+ radio mode, **press the ⏪ or ⏩ button** to choose the station that you want to save, **press and hold the DAB/FM button for 2 seconds**, the words “SAVE TO FX?” will appear on the LCD screen (X is a number, from 0 to 4), then **press ⏪ or ⏩** to select the favourite list (F0-F4), after that **press the DAB/FM button once** to complete the saving, the word “SAVED” will appear on the LCD screen. Repeat these steps to save other favourites.

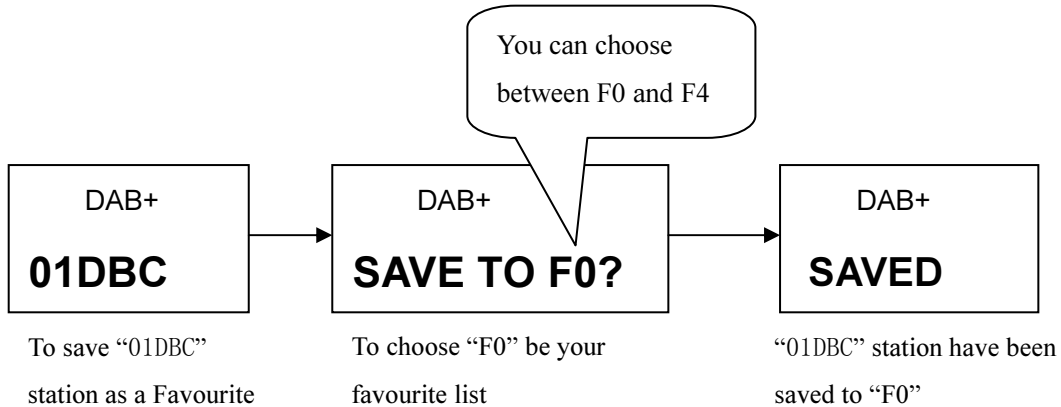

5. Play the favourite DAB+ radio station:


In DAB+ radio mode, **press and hold the Volume + button for 2 seconds**, to switch on the favourite mode, the word “FAVOURITE” will appear on the screen and **press the ⏪ or ⏩ button** to choose the favourite station.

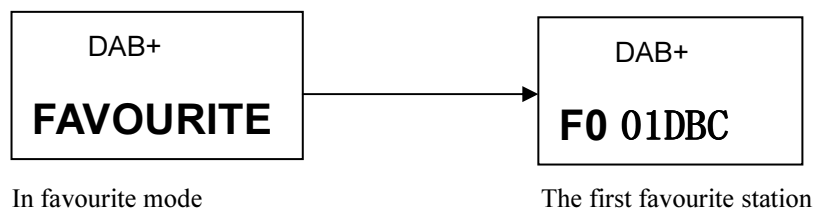

6. Switch off the Favourite mode


In Favourite mode, **press and hold the Volume + button for 2 seconds** or **restart the radio** to switch off the favourite mode.

Remark: For the first time or when you clear all the memory of the favourite list, it will display “FX EMPTY” (X is a number, from 0 to 4) when the favourite lists are blank.

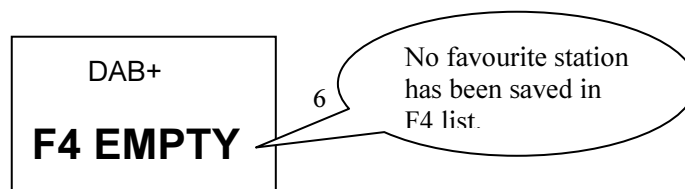

7. Pause or Play the DAB+ Radio

In DAB+ radio mode, **press** the **ON/OFF** button to pause the radio. Then, the clock will appear on the LCD screen. It will be adjusted by the DAB+ radio station automatically. To resume the radio, **press** the **ON/OFF** button.

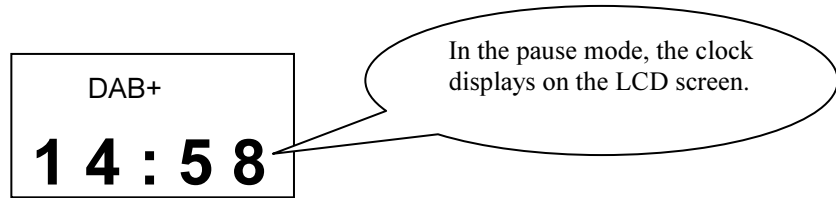

FM Radio Operation

1 Listen to FM radio


In DAB+ mode, **press** the **DAB/FM** button to change to FM mode. The FM radio frequency will appear on the LCD screen. The RDS station name (if available) will be displayed on the LCD screen.

2 Choose the FM saved radio stations

In FM mode, **press** the **◀** button for the previous saved station and **press** the **▶** button for the next saved station.


3 Scan FM radio station

In FM radio mode, **press and hold** the **◀** or **▶** button for **2 seconds**, and the radio will automatically scan the available FM stations, and the word “SCAN” will appear on the LCD screen.

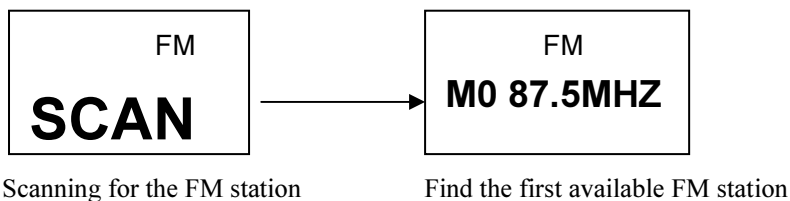

4 Manual Tune

In FM radio mode, **press and hold** the **DAB/FM** button for **2 seconds** until the “FM” icon flashes on the LCD screen, **press** the **◀** and **▶** buttons to adjust the radio frequency. Then **press** the **DAB/FM** button immediately to save or wait for 10 seconds to save the frequency.

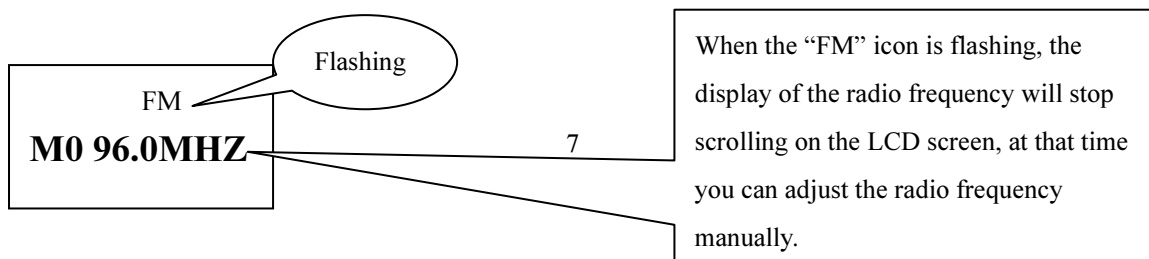


5 Pause or Play FM Radio

In FM radio mode, **press** the **ON/OFF** button to pause the radio. Then, the time will appear on the LCD screen. To resume the radio, press the **ON/OFF** button again.

Clock Setting

In DAB+ station mode, the clock is normally synchronized with the DAB+ stations. If the clock does not show the correct time, follow the instructions below to adjust it:


When the radio is **paused**, **press and hold** the **▶▶** button for **2 seconds** for setting the clock. When the hour display starts flashing, **press** the **▶▶** button to adjust the hour. And then press the **◀◀** button to skip to set the minute. When the minute starts flashing, **press** the **▶▶** button to adjust the minute. **Press and hold** the **▶▶** button for **2 seconds** to finish the setting.

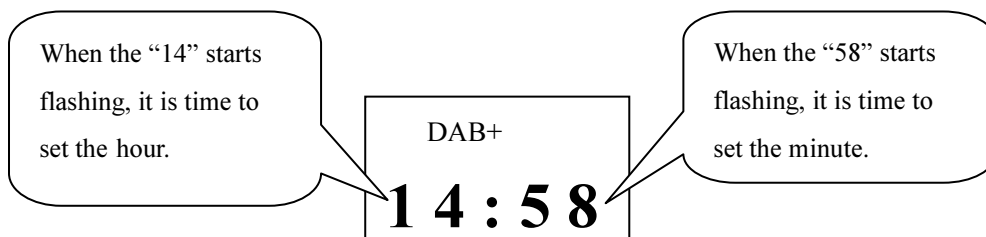

Key Lock

To enable key-lock: Press and hold the **Volume -** button, the word "LOCKED" will scroll on the LCD screen.

To disable key-lock: Press and hold the **Volume -** button, the word "UNLOCK" will scroll on the LCD screen.

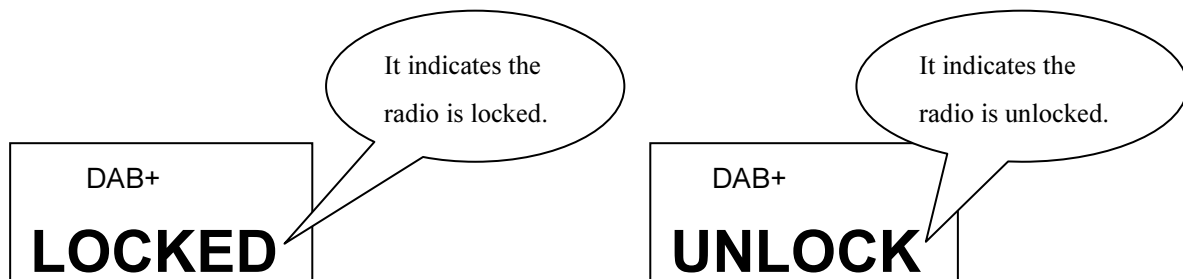

LCD Contrast Setting


When the LCD displays the time, **press** the **volume+** button to increase the contrast of the display, or **press** the **volume-** button to decrease the contrast of the LCD display, the LCD will display “LCD X” (X is the level of contrast, from 0 to 3).



The level 3 is the highest level of contrast of the LCD display.

Reset the DAB+ Radio Stations

When the **DAB-378AP** radio is switch off, **press** and **hold** the **DAB/FM** button and the **ON/OFF** button **at the same time** for about **10 seconds** to delete all the previously saved radio stations. The LCD will display “Ver X” (X is a number). When you switch on the radio again, it will automatically re-scan the new radio stations available.

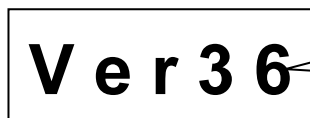

When the LCD screen displays this message, all of the previously saved radio stations were deleted.

Safety Information

1. Do not listen at extremely high volumes. Doing so can damage your hearing.
2. Do not expose the radio to extremely high or low temperature.
3. Do not dispose the radio in a fire as it will result in an explosion.
4. Do not expose the radio to liquids, moisture or humidity as it is not waterproof.
5. Keep the radio away from sharp objects which will cause scratches and damages.
6. Do not attempt to take apart the radio as it does not contain replaceable components.
7. Do not store the radio in excessively dry, extremely temperature and dusty.

Product Specifications

Build-in Polymer-Li rechargeable battery (Charging time: 4 hours)

*8 hours DAB+ Radio playing time

22 hours FM Radio playing time

3.5mm plug in headset socket

Frequency range: (Band III): 174 ~240 MHz

Frequency range: (FM): 87.5~108.0 MHz

Memory for saving 60 DAB+ stations

Memory for saving 10 FM radio stations

Dimension: 48 X 35 X 15 mm

Weight: 29 grams

* May vary with signal strength.